

WELDING GUN CYLINDER HOLDER COMPONENTS

ELECTRODE ADAPTER SELECTION CHART


Adapter Length		
201.9411		
7/8		
1		
1-1/4		
1-3/8		
1-1/2		
2		
2-1/2		
3		

T-101 size Adapters				
1/2" NPT				
4 RW Taper	5 RW Taper			
AP-H24B-7	AP-H25B-7			
AP-H24B-8	AP-H25B-8			
AP-H24B-10	AP-H25B-10			
-	-			
AP-H24B-12	AP-H25B-12			
AP-H24B-16	AP-H25B-16			
AP-H24B-20	AP-H25B-20			
AP-H24B-24	AP-H25B-24			
	1			

T-102 Size Adapters 3/4" NPT		
6 RW Taper	7 RW Taper	
-	-	
-	-	
-	-	
AP-H36D-11	AP-H37D-11	
AP-H36D-12	AP-H37D-12	
AP-H36D-16	AP-H37D-16	
AP-H36D-20	AP-H37D-20	
AP-H36D-24	AP-H37D-24	











STATIONARY WATER TUBES

Part Number	Length
DS-5-3	3/4
DS-5-4	1
DS-5-5	1-1/4
DS-5-6	1-1/2
DS-5-8	2
DS-5-10	2-1/2

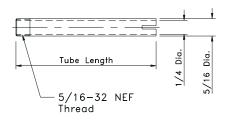

SLIDING WATER TUBES

02.50 1				
Part Number		Length		
DF-4-4		1		
DF-4-5		1-1/4		
DF-4-6		1-1/2		
DF-4-8		2		
DF-4-10		2-1/2		
DF-4-12		3		
DF-4-16		1		



HOW TO ORDER:

T-101 Tubes for use with 4 RW Adapters -

ORDER STATIONARY TUBE AT LEAST 1/4" SHORTER THAN ADAPTER LENGTH.

T-101 Tubes for use with 5 RW Adapters -

ORDER STATIONARY TUBE 1/2" LONGER THAN ADAPTER FOR TUBE TO BE FLUSH.

T-102 Tubes for use with 6 RW or 7 RW Adapters -

ORDER STATIONARY TUBE 3/4" LONGER THAN ADAPTER FOR TUBE TO BE FLUSH.

SLIDING TUBES SHOULD BE ORDERED AT LEAST 1/2" LONGER THAN WATER HOLE DEPTH OF TIP BEING USED.